

Huawei Certified Network Associate

1. 4G antenna of ECC800 should be connected to ().

A. RF_ZA line interface

B. 3G/4G antenna interface

C. RS485 port

D. DO output dry contact

Answer(s): B

2. NetEco can mail reports to customers.

A. TRUE

B. FALSE

Answer(s): A

3. (_____) is the signal processing and centralized management module of UPS5000-E

A. Energy control module (ECM)

B. Power Module

C. Bypass Module

D. Maintenance bypass module

Answer(s): A

4. When installing the power line on the UPS5000-E, if there are different sources on the main-lines and bypass, you need to remove the copper bars connected to the bypass and main lines first, and then connect the main circuit and bypass input respectively.

A. TRUE

B. FALSE

Answer(s): A

5. ECC800 does not support wireless communications.

A. TRUE

B. FALSE C.

C.

Answer(s): B

6. After installing a top air outlet component for the UPS5000, need to set enabled for the top air outlet component on LCD

A. TRUE

B. FALSE

Answer(s): A

7. The straight pipe interval fixedly supported by NetCol5000-C piping is ()

A. 3200mm

B. 3000mm

C. 2800mm

D. 2500mm

Answer(s): D

8. The rated voltage of a cell is

A. 12V

B. 6V

C. 2V

D. 1V

Answer(s): C

9. When the device interface uses the Modbus-RTU protocol, what needs to be installed when accessing the ECC800 .

A. ETH converter

B. Access control actuator

C. sunroof actuator

D. AC actuator

Answer(s): A

10. NetCol5000-Acompressor discharge high pressure alarm occurs, it may not that (_____).

A. The outdoor fan fails to start

B. The outdoor fan is running at low speed

C. The refrigerant is overfilled.

D. The refrigerant is insufficient.

Answer(s): D

11. Which type of report can be exported on the NetEco.

A. Hourly report

B. Daily report

C. Weekly report

D. Monthly report

Answer(s): A B C D

12. First time powering on UPS5000-E, make sure that the UPS main input switch, bypass switch, output switch, maintenance bypass switch and battery switch are all OFF

A. TRUE

B. FALSE

Answer(s): A

13. Which system affects the PUE most in Data Center.

A. Power Distribution system

B. Cooling System

C. N/A

D. Lighting system

Answer(s): B

14. How many power inputs does an RH2288 server support places.

A. 1

B. 2

C. 3

D. 4

Answer(s): B

15. When connecting UPS5000-E in parallel, the parallel cables are not required to connect in a loop.

A. TRUE

B. FALSE

Answer(s): B

16. If the customer load cannot be power-off, what should be taken care when closing the maintenance bypass switch?

A. The maintenance bypass switch can also be closed in the inverter power supply mode

B. Turn off the inverter, let the UPS be in bypass power supply mode and then close the maintenance bypass switch

C. First perform EPO then close maintenance switch

D. Close the maintenance switch first and then execute the EP

Answer(s): A B D

17. Which is not included in the routine maintenance of the ECC800 module?

A. Check whether the power indicator is normal

B. Check the fans for the ECC800 module

C. Check whether the power cable is properly connected

D. Create a micro-module view

Answer(s): D

18. The ATS/MCCB input unit of an integrated UPS is used to ().

A. Provide the branch output of the mains supply

B. Provide dual or single input for cabinets.

C. Provide the branch output of the UPS supply

D. Monitor the running status.

Answer(s): B

19. Two UPS2000-G with different software version can be connected in parallel.

A. TRUE

B. FALSE

Answer(s): B

20. The report functions of NetEco has a variety of presentation forms, including visualization of bar charts, pie charts, graphs, etc.

A. TRUE

B. FALSE

Answer(s): A
